


TM50 Touch User Guide

Digiplex EVO Systems

DIGIPLEX
EVO



Main Screen

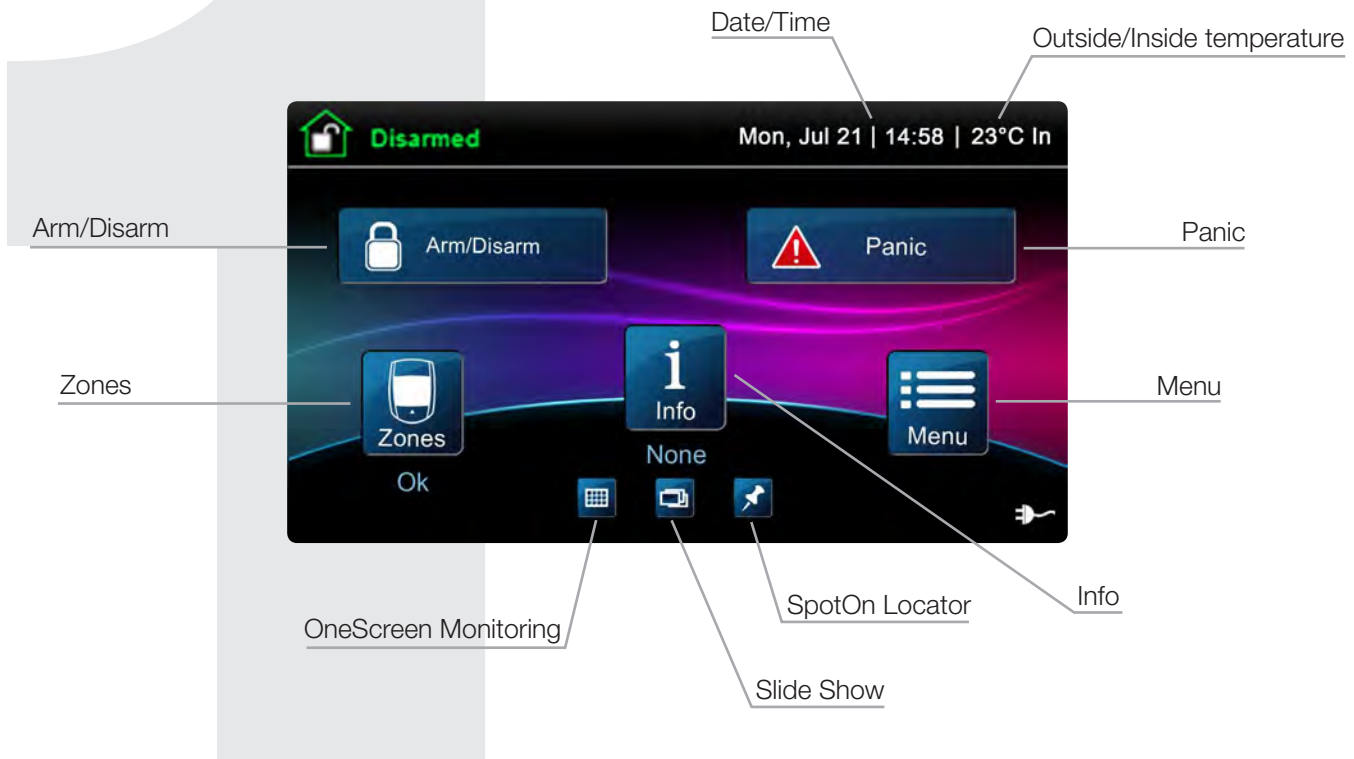

Arming/Disarming your System

Arming/Disarming your system:


1. Press **Arm/Disarm** button from main screen.
2. Select Arming method.
3. Enter code (4 to 6 digits).



Menu

For menu options press the Menu button and follow the on-screen prompts. Menu options include:

- Security Functions
- User Codes
- Control Devices
- Add-on
- System Settings
- Personalize
- Advanced

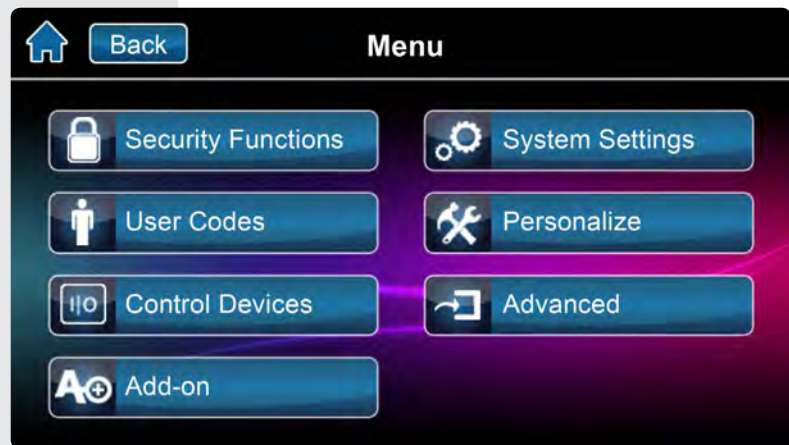

Entering User Programming

Enter user programming:


1. Press **Menu**.
2. Press **User Codes**.
3. Enter Master Code.



Programming a New User

Programming a new user:

1. Press the **Add** button to add a user.
2. Modify Label or press **Skip**.
3. Enter new user code and press **Next**.
4. Confirm user code by entering a 2nd time then press **Next**.
5. Option to learn remote in, press button on remote or press **Skip**.
6. Enter access card number or press **Skip**.
7. User Settings or press **Done**.
8. User is now valid.

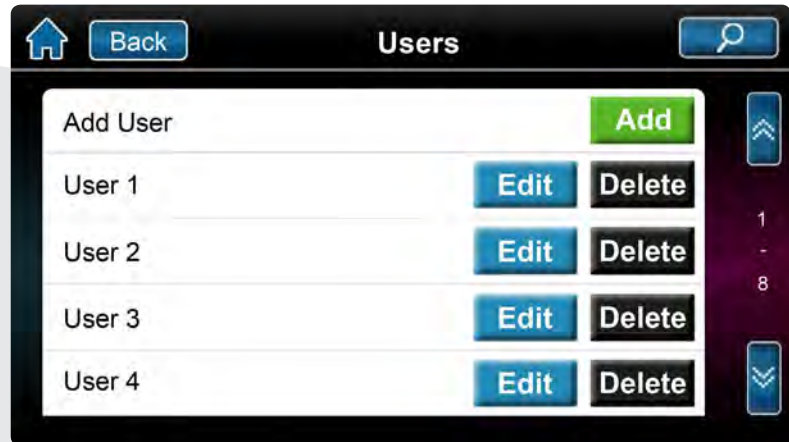


Settings Screen

Setting screen accessed through Menu then System Settings.

Settings include:


- Time & Date
- Display Settings
- Clean Screen
- Volume/Mute
- Permissions

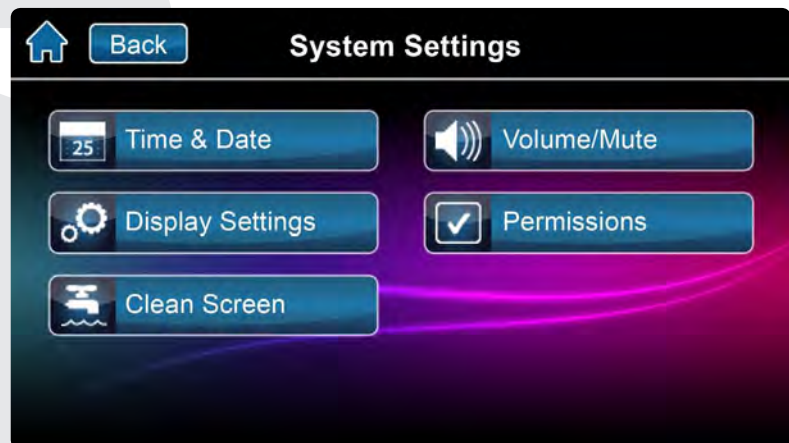


OneScreen Monitoring™

DIGI PLEX
EVO

To Access OneScreen Monitoring*:


1. Press the  button.
2. View open/closed zones (an open door means a zone is open).
3. Press on the **Test** button to test all your zones (SoloTest Mode).
4. Press on the **Settings** button (top right corner) to access more options.

*OneScreen Monitoring is an optional feature. Please contact your installer for more information.

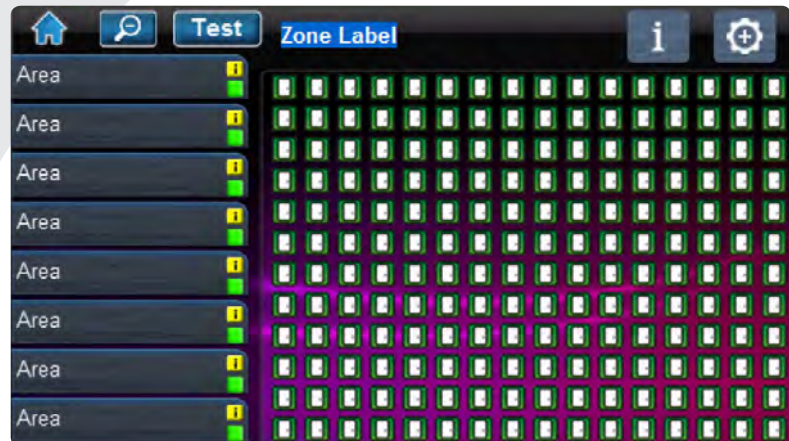

SpotOn Alarm Locator™

To Access SpotOn Locator*:


1. Press the  button.
2. Follow the onscreen instructions on how to upload photos, images, or schematics for your personalized floor plans.
3. Follow the onscreen instructions on how to add/move/delete zones from your floor plan.

*SpotOn Locator is an optional feature. Please contact your installer for more information.



SlideShow

To Access SlideShow:

1. Press the  button to view the default slideshow.
2. Press on the **Settings** button (bottom right corner) to access more options.



microSD Card

The TM50's integrated SD card slot has a cover clip for its protection.

If it is foreseen that the microSD card will be used frequently, it is best that the microSD card cover clip be removed before installation. This is because once the keypad is installed, removal of the microSD card requires you to unclip the entire front plate of the TM50.

To remove/replace the microSD (without cover clip):

1. Push down on the microSD card to unlock.
2. Gently pull out the microSD card to remove. If desired, replace card.



